

READ ME

Inverter	SB3.0-1AV-41 / SB3.6-1AV-41 / SB4.0-1AV-41 / SB5.0-1AV-41 / SB6.0-1AV-41
FW-Version	PACK 4.02.02.R
Update feature/reason	<p>The update file contains all features of former firmware versions.</p> <ul style="list-style-type: none"> – New Country Settings: <ul style="list-style-type: none"> ○ Netherlands: [NL] Netcode elektriciteit Typ A ○ Spain: [ES] TED749:2020 Typ A P ≤ 100 kW ○ Brazil: [BR] Por.140:2022 & 515:2023 P≤6 kW
Update medium	SB3.0_6.0-1AV-41-V4.02.02.R.up2 file update via integrated webserver
File Name	FW4-02-02-R_SB60-1AV-41.zip
Update manual	<ol style="list-style-type: none"> 1. Activate the user interface of the inverter. 2. Log in as Installer. 3. Select the menu Device Configuration. 4. In line Inverter click on the gear icon and select Update firmware. 5. Select the update package made available for the inverter and select Update firmware. 6. Follow the instructions in the dialog. 7. After completion of the update, it is strongly recommended to check the inverter settings, especially the grid code settings
Note	<ul style="list-style-type: none"> – The package includes an update file (*.up2). The file can be downloaded directly to the inverter via Webserver interface using a smartphone, notebook or PC. – The update file contains all features of former firmware versions.