



Socket / Conector hembra / Embase

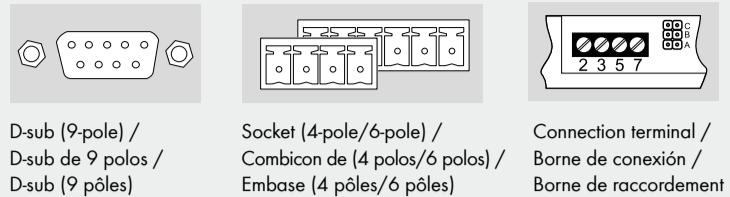

Plug / Conector / Bornier

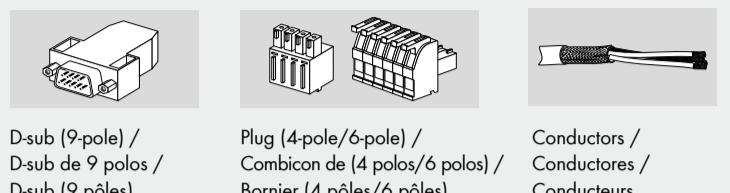



Signal / Señal / Signal	RS485 bus node / Componentes del bus RS485 / Participants au bus RS485	SMA Com Gateway	Sunny WebBox	Sunny Boy Control	Sunny SensorBox		RS485-Power Injector	
					IN	OUT	IN	OUT
	+12V*	-	-	-	+12V	+12V	NC	+12V
	GND	5	3	5	GND	GND	GND	GND
	Data+	2	1	2	D+	D+	D+	D+
	Data-	7	4	7	D-	D-	D-	D-

* +12V is only used for the Sunny SensorBox and the RS485-Power Injector. /



* Sólo en la Sunny SensorBox y en el RS485-Power Injector se usan +12V. /

* +12 V n'est utilisé que pour la Sunny SensorBox et le RS485-Power Injector.



SMA Com Gateway

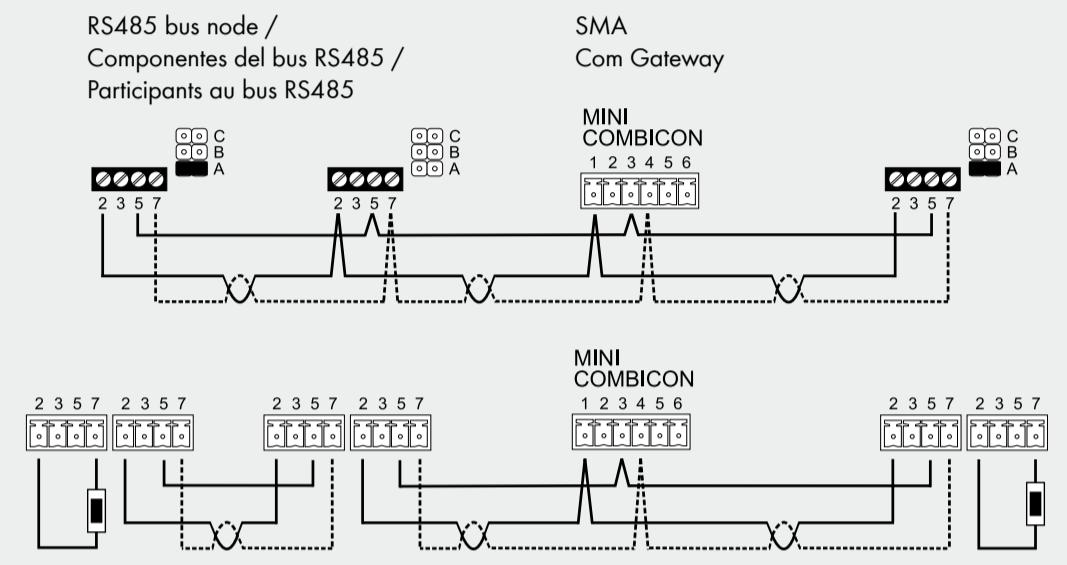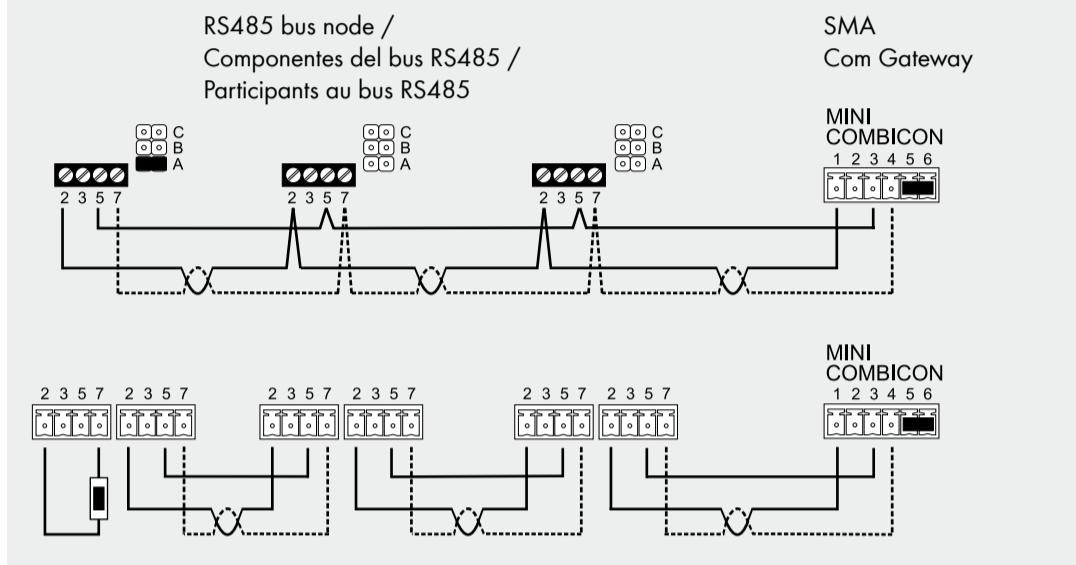

Sunny WebBox

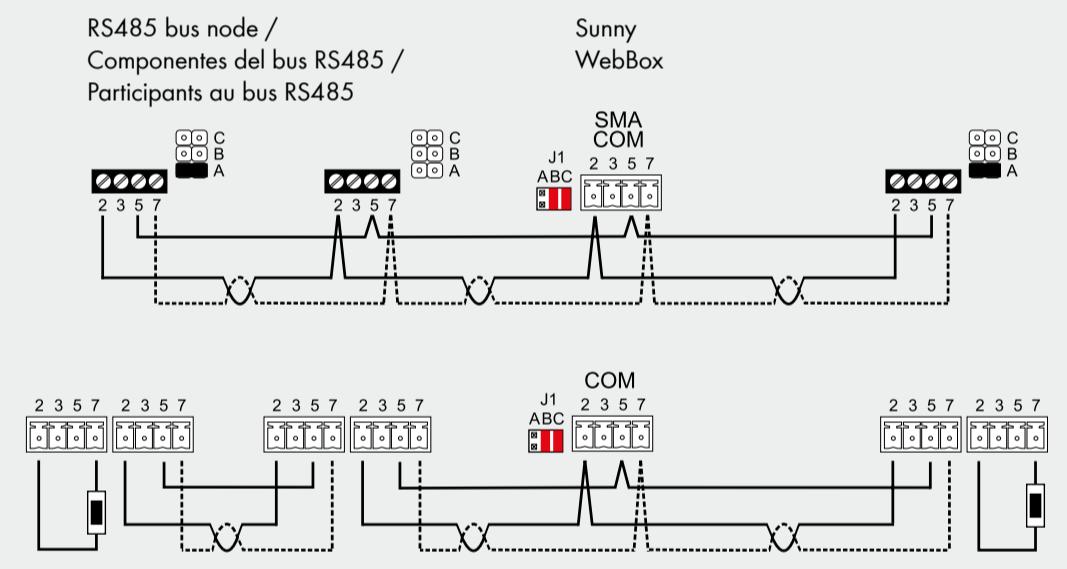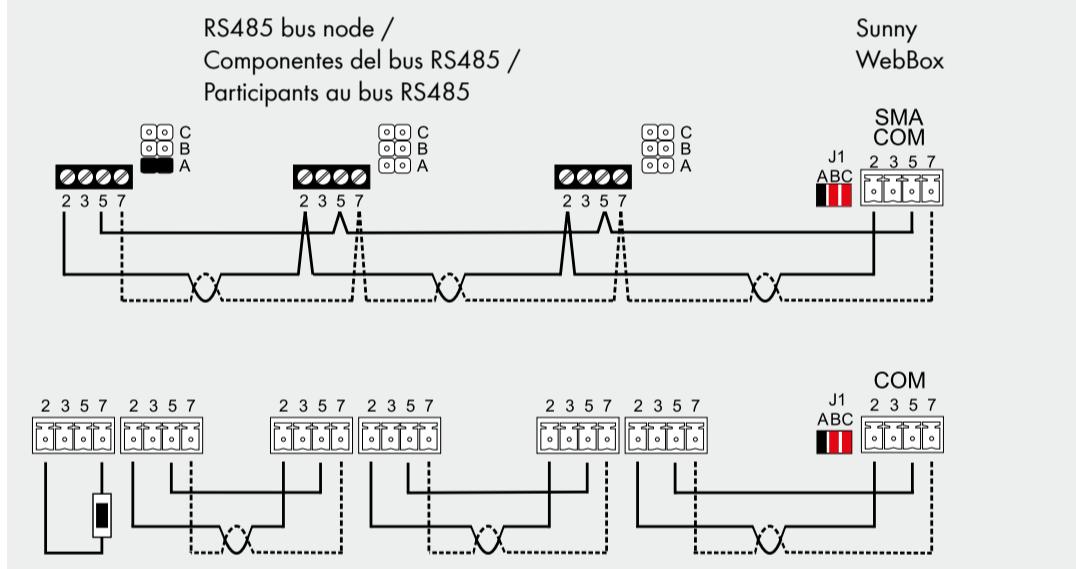

Sunny Boy Control

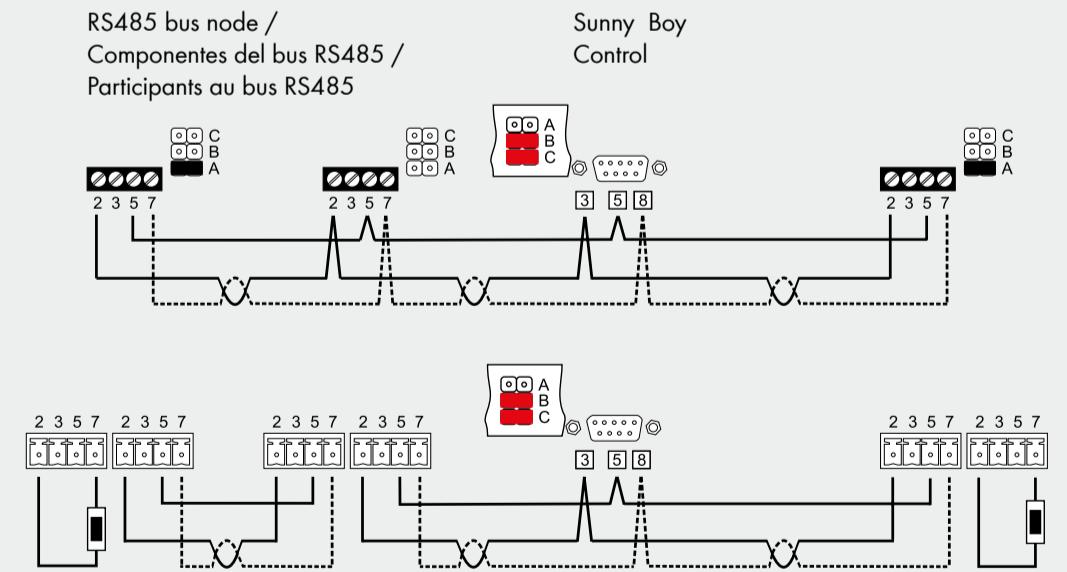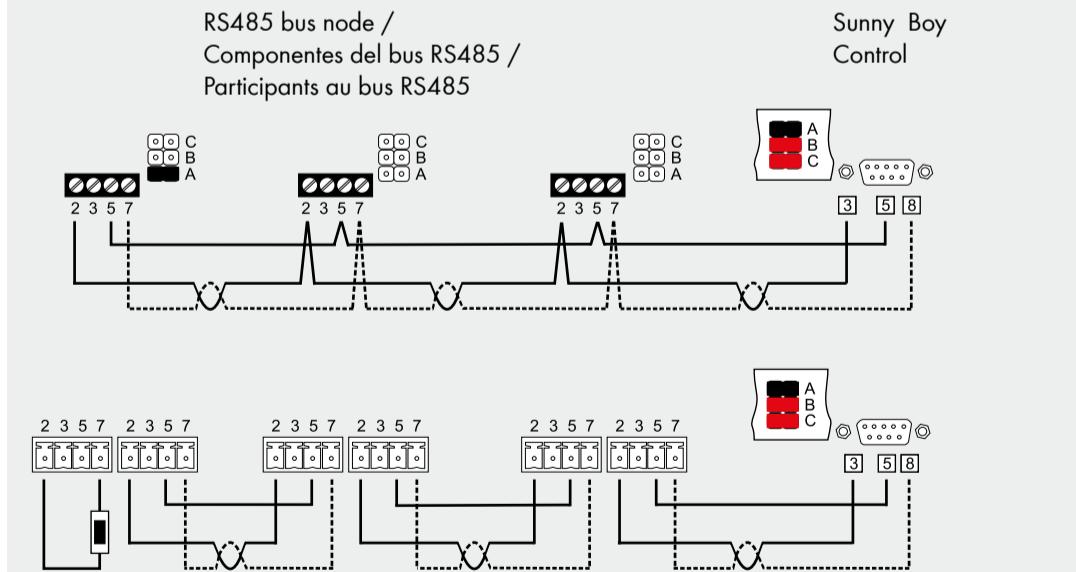

RS485-Power Injector - Sunny SensorBox

